


## PR-100 Assembly Instructions

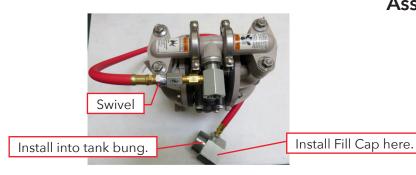

\_\_\_\_

Assemble with swivel end away from relief valve, toward hose.



NOTE: Relief valve is directional. See directional arrow (fine print).

## TIM-RELIEF-KIT Field Adjustment procedure:

- 1. Install kit and pressurize system,
- 2. Back off valve adjustment until you get oil flow out of valve,

- 3. Turn in valve adjustment until oil flow just stops,
- 4. Turn up air pressure to pump and make sure oil does not flow out of valve.

PR-100 Assembly Instructions

410-252-9300

AMERICANLUBE.COM

Date: Dec 2020 Version: 1.01