

TIM-900B-1, TIM-900B-LN Short Guide
(aka M0096 A)

AMERICAN

LUBRICATION EQUIPMENT CORPORATION®

English

Batch Total

Operation in
AUTO mode

Total type (Total or
Resettable Total)

PRESET BATCH METER

MADE IN ITALY PATENTS PENDING



Batch total
measurement
unit

Total
measurement
unit

Numeric keys
to set the
preset value



AUTO key
to select and
confirm the
preset value

RESET key to reset
the Batch Total
and display the
Resettable Total

Short Guide

BULLETIN M 0096A REV.1

TIM-900

Dispensing nozzle for oil
and industrial fluids

A Dispensing in manual mode

If the TIM-900 is off, type RESET to re-start it.
The TIM-900 displays:



Last amount dispensed.



Non-resettable Total.

To reset the Batch Total press RESET.

The TIM-900 will display:

Reset Batch Total.



Resettable Total.

To RESET the Resettable Total, press and hold down the RESET key.

The TIM-900 will display:



Resettable Total.

Pull the trigger to dispense.



Release the trigger to stop dispensing.



B Setting the PRESET value for AUTO mode dispensing


Setting a new PRESET value.

If the TIM-900 is off, type RESET to re-start it. TIM-900 displays:



Non-resettable Total.

To select a new PRESET value (for example 12.3) use the numeric keys.

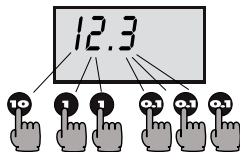

The TIM-900 displays:

Selected value.



Blinking message AUTO.

To confirm the PRESET value, **press and hold down the AUTO key** until the TIM-900 displays:



Reset Batch Total.

AUTO message **not** blinking.



Selected value.

TIM-900 is ready to start dispensing in AUTO mode (see paragraph C).

Selecting a PRESET value of frequent use.

TIM-900 stores:

AUTO last:
the last PRESET value used

AUTO 1-2-3-4-5:
five different PRESET values of frequent use.

If the unit is off, type RESET to re-start it.
The TIM-900 displays:

Last amount dispensed.



Non-resettable total.

Press **AUTO**.
The TIM-900 displays the
PRESET value stored in
AUTO LAST.



PRESET value.



Blinking
message **AUTO LAST**.

Press **AUTO** again.
The TIM-900 displays the
PRESET value stored
in **AUTO 1**.



PRESET value.




Blinking
message **AUTO 1**.

To display the other stored
values, press **AUTO** as many
times as necessary to reach
the desired values.



Blinking message
will be:

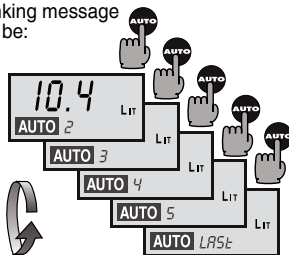

To confirm a PRESET
value **press and hold**
down the **AUTO** key
until the TIM-900
displays:



Reset Batch Total.



AUTO message
Not blinking.

Selected value.

TIM-900 is ready to start dispensing in AUTO mode (see paragraph C).

C Dispensing in AUTO mode

• To start dispensing:

Pull the trigger completely and then release it.




The trigger thus remains locked in open position.

Now dispensing can continue in AUTO mode



• To stop manually dispensing in progress:

Pull again the trigger completely and then release it.

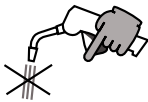

Warning

In any case the operator must attend to the TIM-900 while dispensing in AUTO mode in order to avoid any oil spillage

• Automatic stop:

The supply automatically stops when the pre-set value is reached..


The AUTO indication disappears from the LCD.



• Manual resumption of the dispensing (TOPPING UP):

Once dispensing has been carried out in AUTO mode, the TIM-900 allows the user to continue the dispensing operation, if necessary.

To carry out the TOPPING UP, **DO NOT type RESET** and pull the trigger.

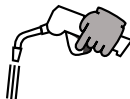

The dispensed amount is added to the previous one in AUTO mode. The **PRESET value** previously set, displayed in the Total, **starts blinking to indicate that the pre-set value has been exceeded.**



Blinking value.