


## PR-750 Assembly Instructions



Install Fill Cap, etc. here.

Install into tank bung.

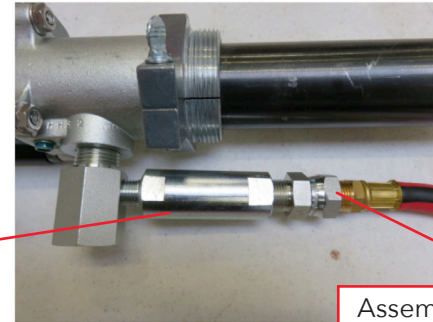

Relief valve is directional. Male thread inlet.

Assemble with swivel end away from relief valve, toward hose.

All fittings: triple wrap Teflon tape topped with petroleum compatible pipe dope (Ex: Gasoila).